Fisher-Price®

Instructions

Deluxe Car Seat

Model Number AO9104

Important Safety Information

- Read this instruction booklet carefully and entirely, before using the Deluxe Car Seat.
- While no one can predict when the use of a car seat will prevent injury or death, it will reduce the risk of injury to your child in an accident.
- Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address and the restraint's model number and manufacturing date to: Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, or call 1-800-432-5437. For recall information, call the U.S. Government's Auto Safety Hotline at 1-800-424-9393 (202-366-0123 in D.C. area).

⚠ WARNING

PROPER INSTALLATION AND USE ARE NECESSARY.

Improper installation or use could result in serious injury or death in an accident. Follow the instructions in this booklet.

- Refer to your vehicle owner's manual for instructions on vehicle seat belt use and for specific instructions on how to install a child restraint in your vehicle.
- An inflating passenger-side airbag could seriously injure an infant in a rear-facing car seat. If your vehicle has a passenger-side airbag, never secure the rear-facing (infant position) Car Seat in the front seat. Install it in the rear seat of the vehicle.
- Alteration of your vehicle seat belt system could lead to belt failure and a serious or fatal injury. Do not alter the vehicle seat belt system yourself. Contact your vehicle dealer.
- An unsecured car seat could injure other occupants in a sudden stop or accident. Always securely belt the Car Seat to your vehicle, even if it is not occupied.
- An accident can cause hidden structural damage to the Car Seat. Replace the Car Seat if it is involved in an accident.

Keep these instructions in the plastic pocket on the back of the Car Seat for future reference.

TABLE OF CONTENTS

Warnings 1

A. Getting To Know Your Fisher-Price Car Seat 3

B. Pad Assembly 4

C. Where To Place Your Car Seat In A Vehicle 5

D. Aircraft Use 5

E. Seat Recline Adjustment 6

INFANT (REAR-FACING POSITION) (UP TO 20 LBS.)

F. Infant Shoulder Harness Assembly 7

G. Selecting A Car Seat Location For An Infant 8

H. Securing Your Infant 9

I. Locking Clip Use 11

TODDLER (FORWARD-FACING POSITION) (20-40 LBS. AND UP TO 40" IN HEIGHT)

J. Toddler Shoulder Harness Assembly 12

K. Toddler Vehicle Belt Use 13

L. Locking Clip Use 14

M. Securing Your Toddler 15

N. Car Seat Care 16

A. GETTING TO KNOW YOUR FISHER-PRICE DELUXE CAR SEAT

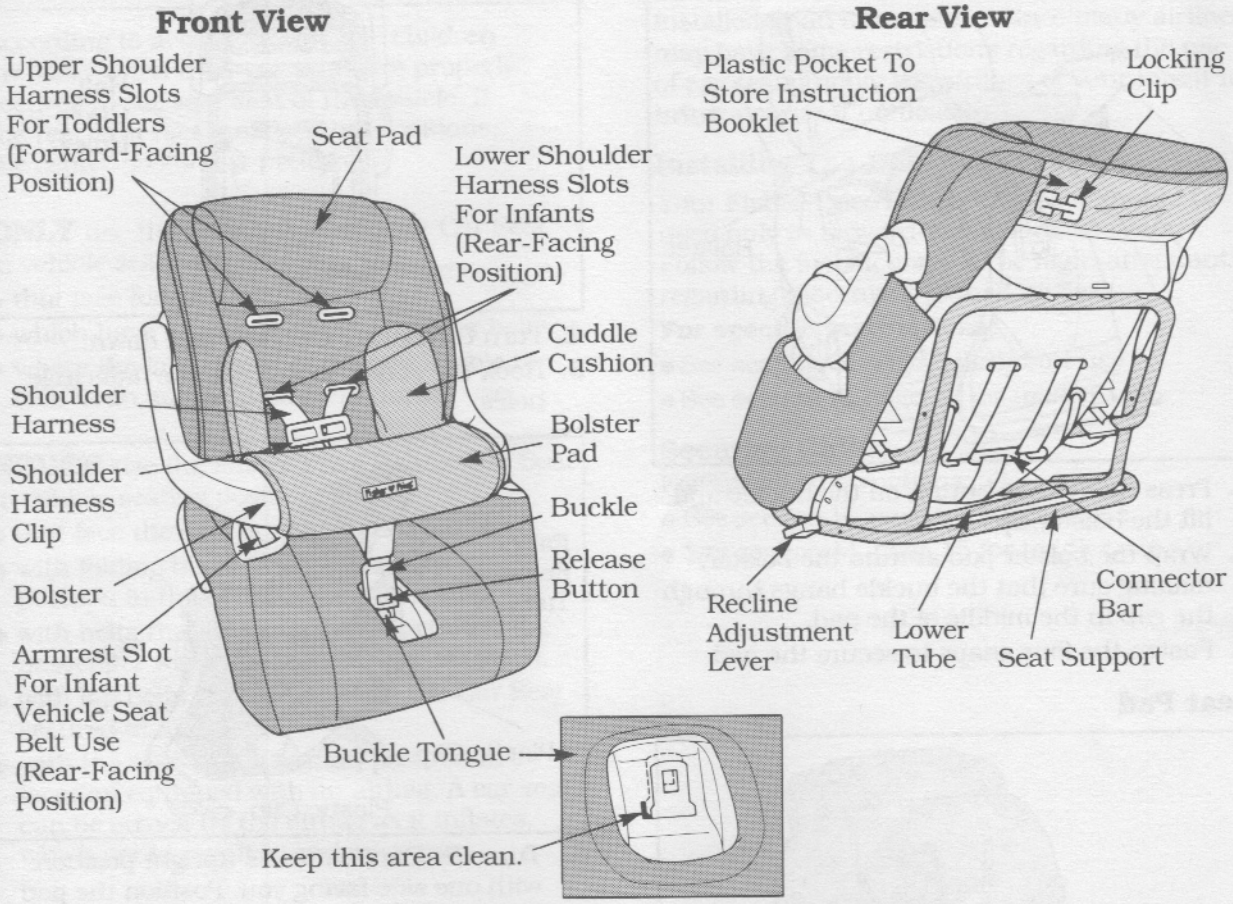

The Fisher-Price Deluxe Car Seat is shown in the Infant, Rear-Facing position.

The Fisher-Price Deluxe Car Seat shoulder harness automatically adjusts to fit your child. When the Car Seat shoulder harness is unbuckled, the buckle tongue moves back to release the shoulder harness.

NOTE: The entire area around the buckle tongue should be checked frequently and kept clean and clear of anything that will prevent it from sliding back when the buckle is unbuckled.

If the shoulder harness does not release after it is unbuckled, check to see if the buckle tongue area is clear. Push back the buckle tongue to release the shoulder harness.

If you have any problems or questions on the proper use or installation of the Fisher-Price Deluxe Car Seat after reading this instruction booklet, please call Fisher-Price Consumer Affairs, toll free at **1-800-432-KIDS** (1-800-432-5437) between 8:00 a.m. and 6:00 p.m. Eastern time, Monday through Friday, or write to:

Fisher-Price, Inc.
Attn: Consumer Affairs
636 Girard Avenue
East Aurora, New York 14052

3. PAD ASSEMBLY

Bolster Pad

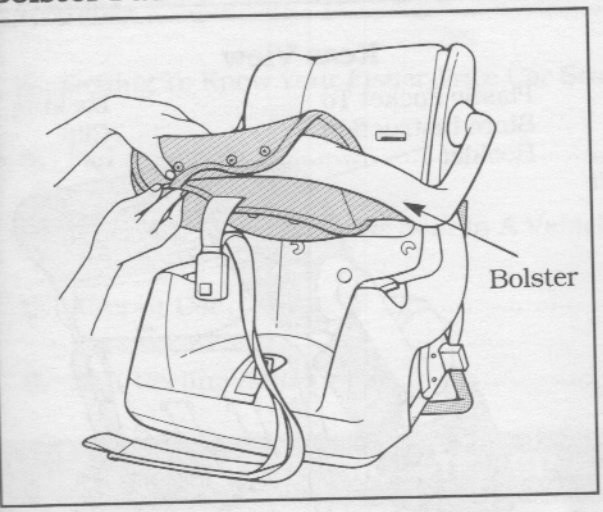

1. Press the release button on the buckle and lift the bolster up.
2. Wrap the bolster pad around the bolster, making sure that the buckle hangs through the gap in the middle of the pad.
3. Fasten the four snaps to secure the pad.

Seat Pad

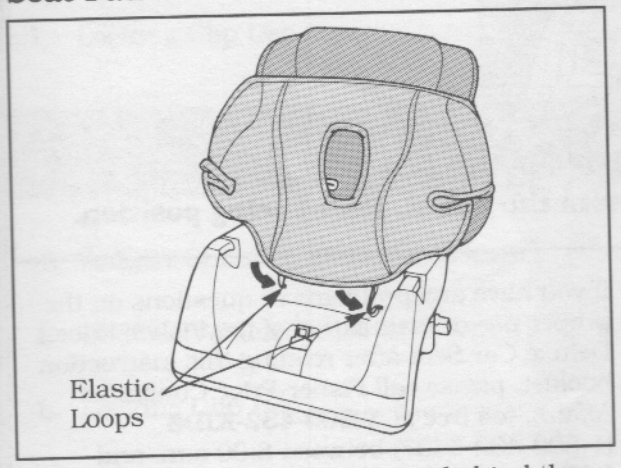

1. Lift the bolster up and place it behind the seat back.
2. Place the top of the seat pad over the seat back, noting the position of the two elastic loops.
3. Insert the two elastic loops through the holes in the bottom of the seat shell.

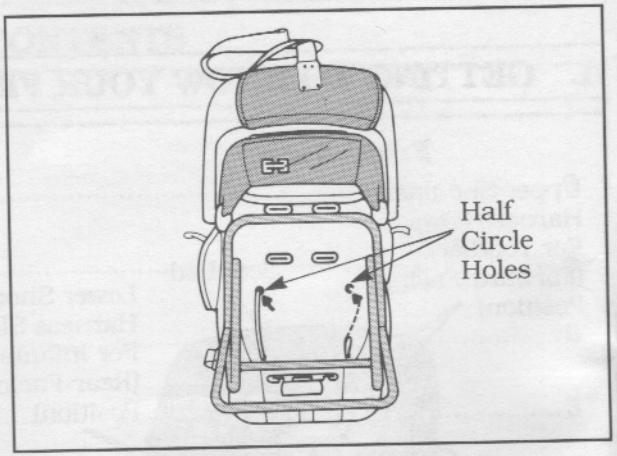

4. Turn the Deluxe Car Seat face down.
5. Hook the elastic loops onto the half circle holes.

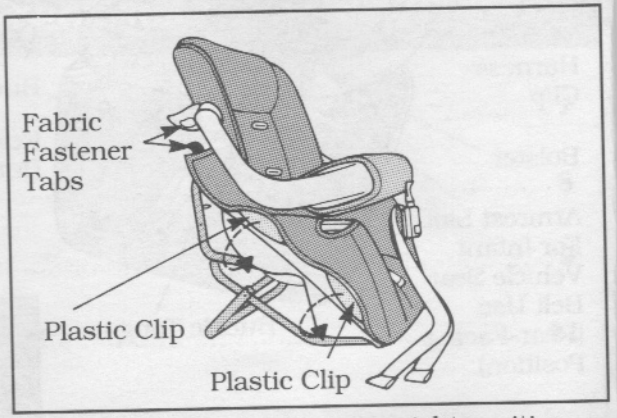

6. Turn the Car Seat to its upright position, with one side facing you. Position the pad into seating area and over armrests.
7. Push the bolster down.
8. There are two plastic clips on the side of the seat pad. Hook the plastic clips around the corners of the seat shell.
9. There are fabric fastener tabs on the upper side of the seat pad. Wrap the pad around the bolster and press the two tabs together to secure.
10. Turn the Car Seat so that the other side is facing you.
11. Hook the plastic clips of the seat pad around the corners of the seat shell.
12. Wrap the pad around the bolster and press the fabric fastener tabs together to secure.

C. WHERE TO PLACE YOUR DELUXE CAR SEAT IN A VEHICLE

According to accident statistics, children are safer when their car seats are properly secured in the rear seat of the vehicle. If the rear seat has three seating positions, the center position is preferred.

ONLY use the Fisher-Price Deluxe Car Seat in vehicle seating positions:

- that face forward,
- which have a lap belt or lap-shoulder belt,
- where the lap portion of the belt is able to lock in an adjusted position during use.

NEVER use the Fisher-Price Deluxe Car Seat in vehicle seating positions:

- that face the side or rear of the vehicle,
- with folding backs that do not lock in position in the event of a sudden stop,
- with belts that automatically surround the passenger when the vehicle door is closed,
- with lap belts that do not keep the Car Seat secured at all times,
- with the rear-facing (infant) position in a location equipped with an airbag. A car seat can be struck by the airbag as it inflates, which could result in serious injury.

D. AIRCRAFT USE

Your Fisher-Price Deluxe Car Seat can be installed in an aircraft seat the same way it is installed in an automobile. Since many airlines may have some restrictions regarding the use of car seats, notify the airlines of your intent to bring a car seat on board.

Installing The Deluxe Car Seat

Your Fisher-Price Deluxe Car Seat should be used only in forward-facing aircraft seats. Follow the instructions of the flight attendant regarding placement of the Car Seat.

For specific instructions:

- See section G, page 8 for infant use.
- See section K, page 13 for toddler use.

Securing Child

For specific instructions:

- See section H, page 9 for infant use.
- See section M, page 15 for toddler use.

E. SEAT RECLINE ADJUSTMENT

Your Fisher-Price Deluxe Car Seat is adjustable to three positions: one for infants in the rear-facing position and two for toddlers in the forward-facing position.

Infant, Rear-Facing (Up to 20 lbs.) Reclined

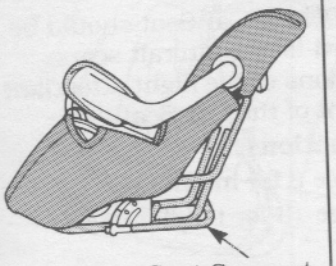

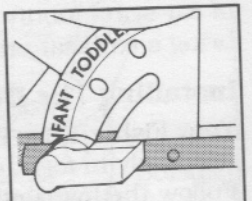

Recline Adjustment Lever

Toddler, Forward-Facing (20-40 lbs.) Semi-Reclined

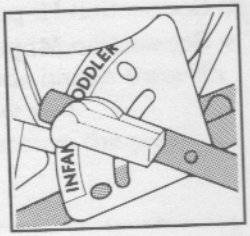

Toddler, Forward-Facing (20-40 lbs.) Fully Upright

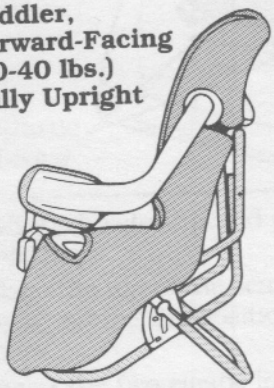

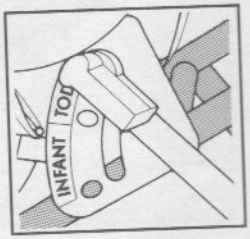

To adjust:

1. Support the Car Seat firmly by holding the seat back.
2. Turn the recline adjustment lever to release the seat support.
3. Rotate the seat support to the desired position.
4. After selecting a seating position, turn the recline adjustment lever to secure the seat support in the correct position.
5. Push down on the seat bottom to be sure the seat support is secured in position.

INFANT (REAR-FACING POSITION) (UP TO 20 LBS.)

The following instructions discuss the proper assembly and installation of your Fisher-Price Deluxe Car Seat for your infant.

- Adjust the recline adjustment lever to the reclined, infant position. (See section E, page 6 for specific instructions.)

F. INFANT SHOULDER HARNESS ASSEMBLY

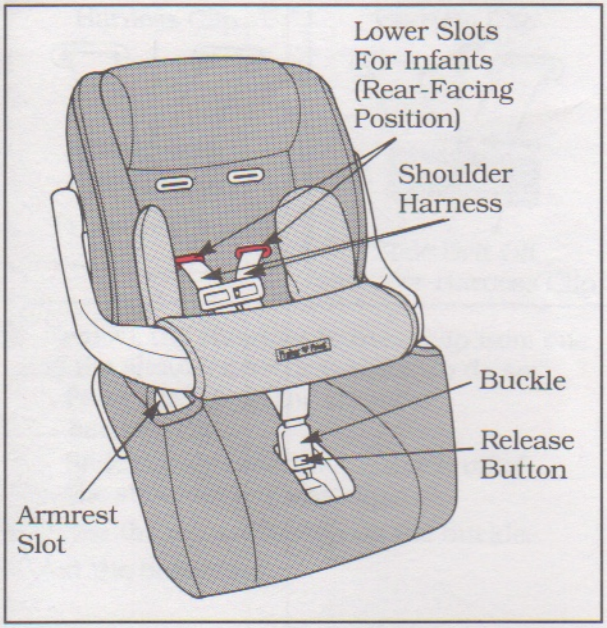

1. Press the release button on the buckle and lift the bolster up.
2. Insert the shoulder harness through the lower slots on the front of the Car Seat, making sure that the shoulder harness is not twisted.

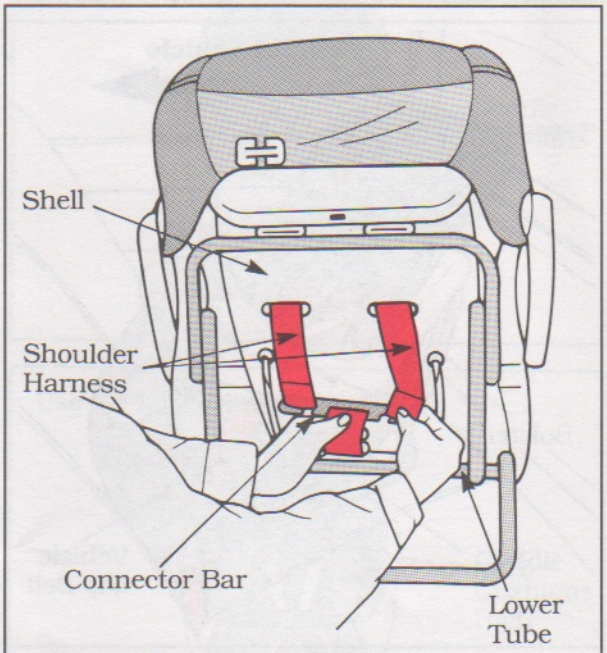

NOTE: The shoulder harness and connector bar must pass between the lower tube and the Car Seat shell.

3. Turn the Car Seat so that it is facing away from you.
4. Reach under the Car Seat to grasp the connector bar and pull it up. The belt should not pass over the lower tube.

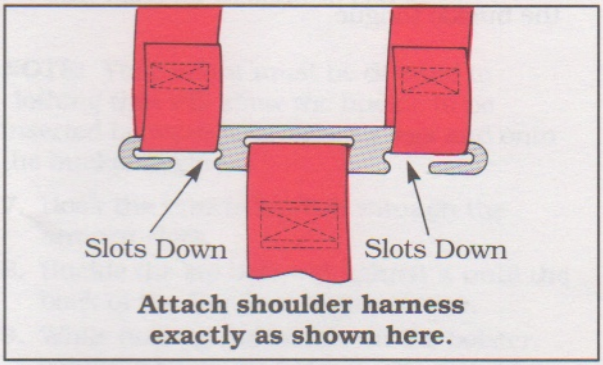

Attach shoulder harness exactly as shown here.

5. Attach the shoulder harness to the connector bar, making sure that none of the belts are twisted.

G. SELECTING A CAR SEAT LOCATION FOR AN INFANT

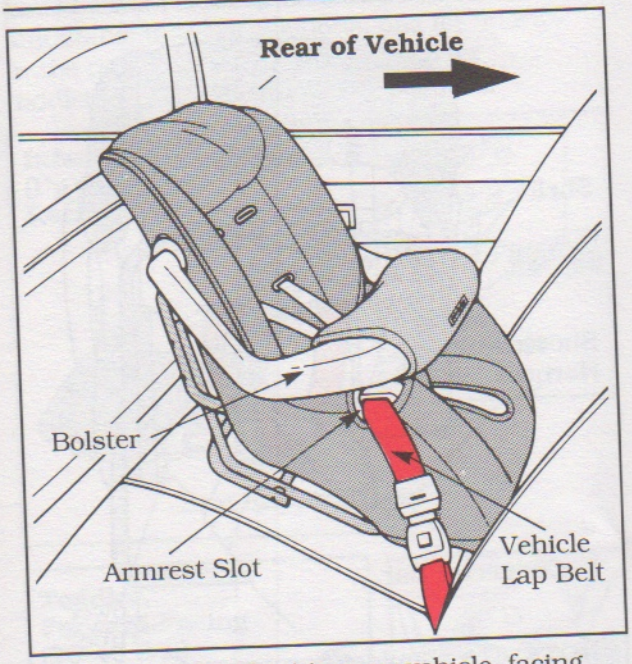

1. Place the Car Seat in your vehicle, facing the rear.
2. Press the release button on the buckle and lift the bolster up.
3. Hook the vehicle lap belt through the armrest slots.
4. Buckle the lap belt and tighten it until the back of the Car Seat begins to rise.
5. Lower the bolster and insert the buckle into the buckle tongue.
6. Test for a secure installation by forcibly pushing the Deluxe Car Seat from side to side. The lap belt should not move.

NOTE: It is normal for the Car Seat to pivot slightly forward and backward when properly installed for infant use (rear-facing position) in your vehicle.

7. If the lap belt moves, a locking clip is required (see section I, page 11, Locking Clip Use).
8. If the lap belt does not move, the Car Seat is in a secure location. Remove the vehicle lap belt, and see section H, page 9, Securing Your Infant.

H. SECURING YOUR INFANT

1. Place the Car Seat in a secure location in your vehicle, facing the rear.

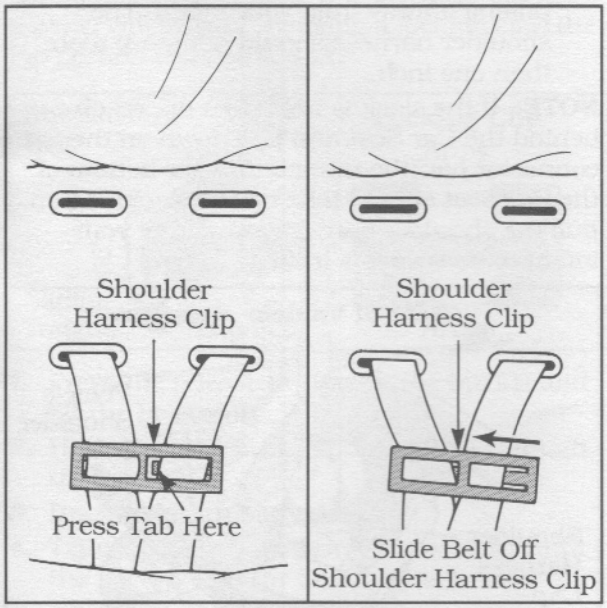

2. Remove the shoulder harness clip from one of the shoulder harness belts. To do so:
   - Press the tab on the shoulder harness clip.
   - Slide the shoulder harness belt off of the shoulder harness clip.
3. Press the release button on the buckle.
4. Lift the bolster up.

Use for newborn or very small infants.

Use for larger infants.

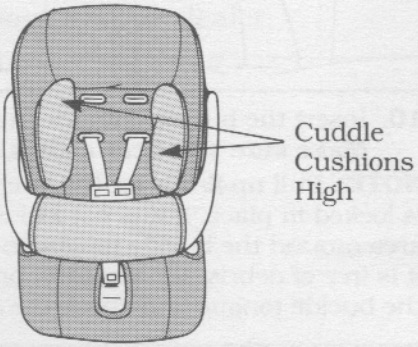

5. Place the cuddle cushions in the Car Seat, as shown, in either the low or high position.
6. Place your infant in the Car Seat. Your infant's bottom should be against the Car Seat back for maximum comfort.

NOTE: Your infant must be dressed in clothing that will allow the buckle to be inserted between your infant's legs and onto the buckle tongue.

7. Hook the vehicle lap belt through the armrest slots.
8. Buckle the lap belt and tighten it until the back of the Car Seat begins to rise.
9. While holding the buckle on the bolster, carefully lower the bolster. The shoulder harness should be on your infant's shoulders.

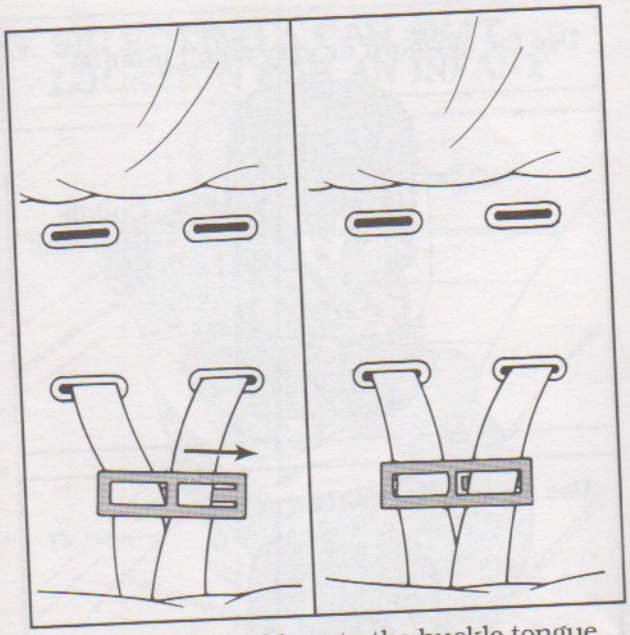

10. Insert the buckle onto the buckle tongue. **Make sure you hear a click!**

NOTE: Pull up firmly on the buckle to be sure it is locked in place. If it is not locked, check the area around the buckle tongue to be sure it is free of debris. If necessary, pull forward on the buckle tongue and check the area behind it.

⚠ WARNING

The bolster alone is not sufficient to restrain your child in an accident. The buckle must be securely attached to the buckle tongue.

11. Fasten the shoulder harness clip on the shoulder harness belt. To do so:
- –Press the tab down on the shoulder harness clip.
- –Slide the shoulder harness completely onto the shoulder harness clip.

12. Position the shoulder harness clip so that it is resting on your infant's chest.

13. Check that the shoulder harness fits snugly over your infant's shoulders. Press the shoulder harness inward toward your infant to take up the slack. Check to be sure the shoulder harness is locked by pulling it away from your infant. The shoulder harness should not move more than one inch.

NOTE: If the slack is not taken up, reach behind the Car Seat and pull down on the connector bar (the retractor on the bottom of the Car Seat should take up the slack). Again, pull the shoulder harness away from your infant to be sure it is locked.

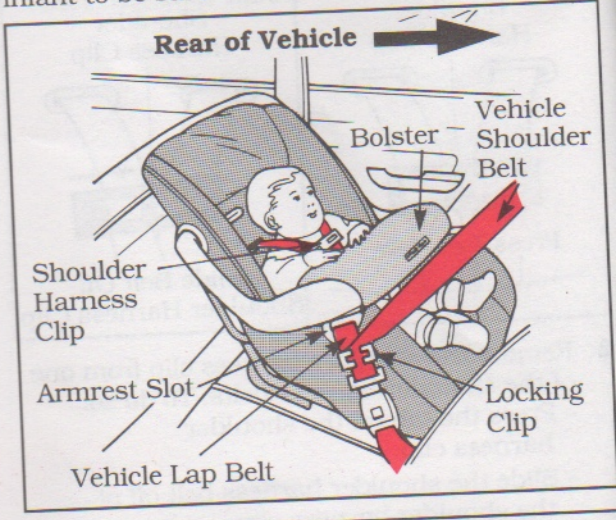

Infant (Rear-Facing) Checklist

When installing your Fisher-Price Deluxe Car Seat, be sure that:

- ✓ It is **facing the rear** of the vehicle.
- ✓ The shoulder harness is **through the lower slots.**
- ✓ It is in the **reclined position.**
- ✓ The vehicle lap belt or lap-shoulder belt is through the armrest slots and buckled.
- ✓ It has been **tested** for a secure installation.
- ✓ The shoulder harness clip is **resting on infant's chest.**
- ✓ The buckle is **locked.**

I. LOCKING CLIP USE (REAR-FACING)

Some vehicles have continuous loop lap-shoulder belts which allow the belt to move freely through the sliding tongue. After it is buckled, the lap portion will loosen. By using a locking clip, the lap portion will not loosen.

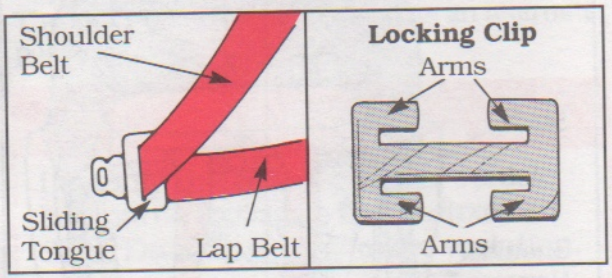

1. Press the release button on the buckle and lift the bolster up.
2. Hook the vehicle lap-shoulder belt through the armrest slots.
3. Buckle the lap-shoulder belt.
4. Tighten the belt as much as possible, until the back of the Car Seat begins to rise.

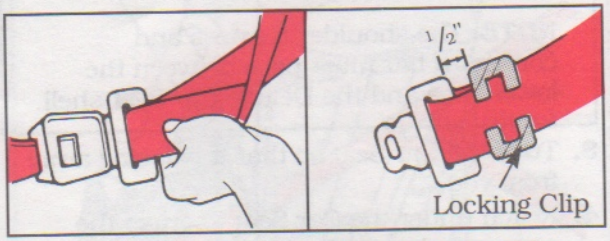

5. With the belt tight, hold the lap-shoulder belts together just behind the sliding tongue, and unbuckle the belt.
6. While continuing to hold the belts together, place the locking clip on the belts approximately 1/2" from the sliding tongue. Tuck the edges of the belts under the arms of the locking clip on both sides.
7. Buckle the belt. Tug on the lap belt to be sure it does not move.
8. Test for a secure installation by forcibly pushing the Car Seat from side to side.

NOTE: It is normal for the Car Seat to pivot slightly forward and backward when properly installed for infant use (rear-facing position) in your vehicle.

NOTE: If the lap belt continues to move, choose another seating position. If there is not a position which will keep the Car Seat secured with a lap belt, contact your vehicle dealer to have a lap belt installed in your vehicle.

⚠ WARNING

Alteration of your vehicle seat belt system could lead to belt failure and a serious or fatal injury. Do not alter the vehicle seat belt system yourself. Contact your vehicle dealer.

TODDLER (FORWARD-FACING POSITION) (20 - 40 LBS. AND UP TO 40" IN HEIGHT)

The following instructions discuss the proper assembly and installation of your Fisher-Price Deluxe Car Seat for your toddler.

NOTE: Your toddler must be capable of sitting upright, unassisted to use the forward-facing position.

- Adjust the recline adjustment lever to the semi-reclined or fully upright toddler position. (See section E, page 6, for specific instructions.)

J. TODDLER SHOULDER HARNESS ASSEMBLY

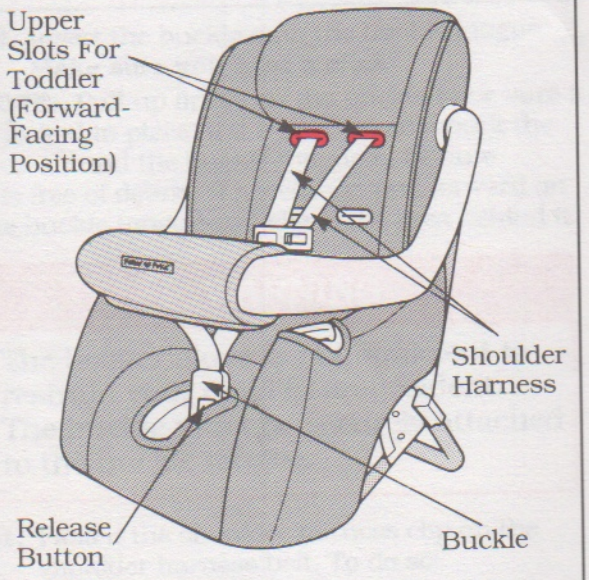

1. Press the release button on the buckle and lift the bolster up.
2. Insert the shoulder harness through the upper slots on the front of the Car Seat, making sure the shoulder harness is not twisted.

IMPORTANT NOTE: Never use the lower slots for the shoulder harness when the Car Seat is in the forward-facing, toddler position.

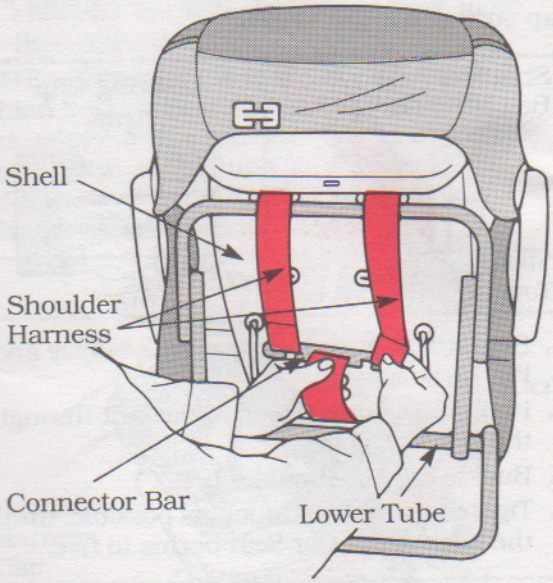

NOTE: The shoulder harness and connector bar must pass between the lower tube and the Deluxe Car Seat shell.

3. Turn the Car Seat so that it is facing away from you.
4. Reach under the Car Seat to grasp the connector bar and pull it up. The belt should not pass over the lower tube.

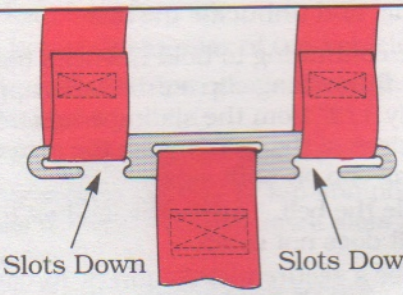

Attach shoulder harness exactly as shown here.

5. Attach the shoulder harness to the connector bar, making sure that none of the belts are twisted.

K. TODDLER VEHICLE BELT USE

Your Fisher-Price Deluxe Car Seat provides an upper and lower vehicle belt path to accommodate most vehicle seat belts. The upper belt path is the preferred position. The lower belt path is provided as an alternate position.

⚠ CAUTION

Use only the upper or lower vehicle belt paths to secure the Deluxe Car Seat. Do not use any other variation.

Upper Belt Path - Preferred Use

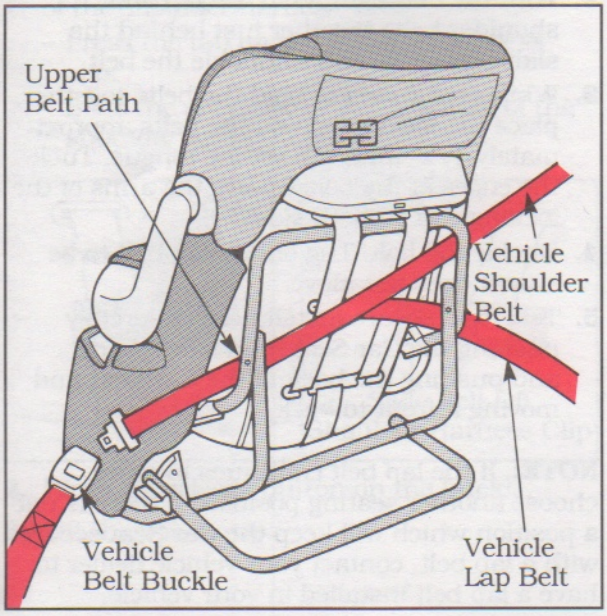

1. Insert the vehicle lap belt or lap-shoulder belt through the upper opening in the frame, as shown.
2. Buckle and tighten the vehicle belt.

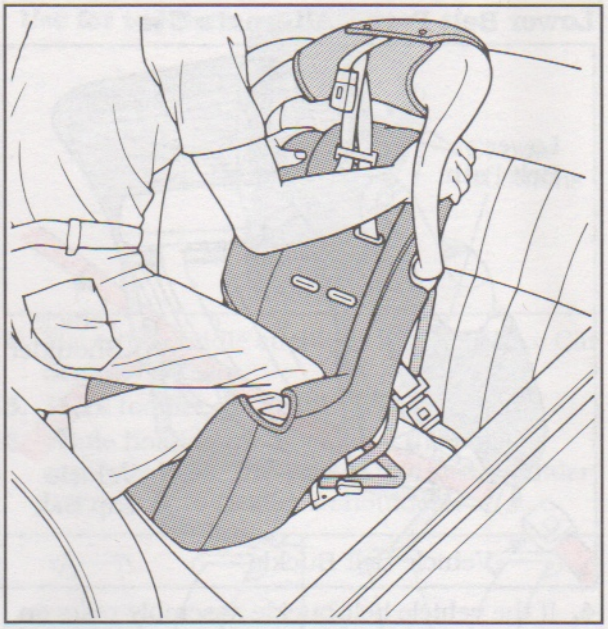

3. While the lap belt or lap-shoulder belt is buckled, push down on the Car Seat with your knee and tighten the belt.

NOTE: For a lap belt that automatically retracts, push the lap belt into the retractor to take up the slack.

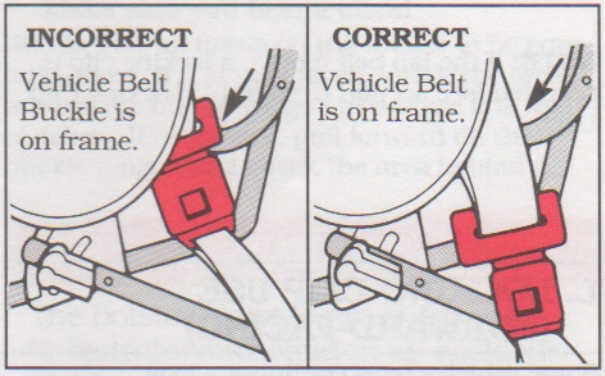

- The vehicle belt buckle should not rest on the frame. The vehicle lap belt cannot be tightened correctly when the buckle assembly is against the frame. (See step 4 on next page).
- The vehicle lap belt is tight against the frame. (See step 5 on next page).

Lower Belt Path - Alternate Use

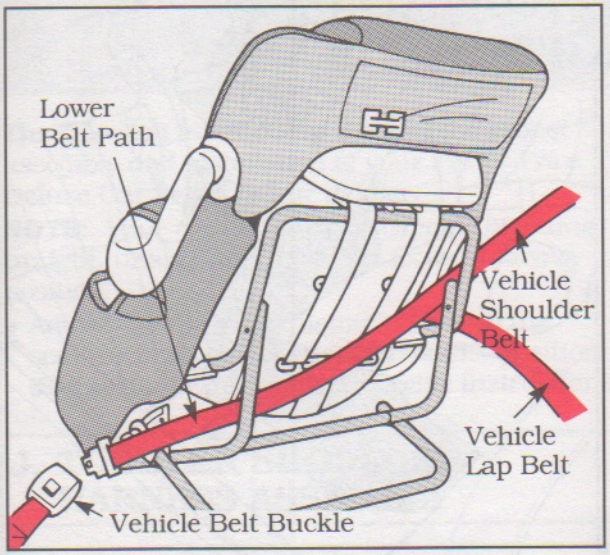

4. If the vehicle belt buckle assembly rests on the frame, unbuckle the vehicle belt, and re-route the belt through the lower belt path.
5. Test for a secure installation by forcibly moving the Car Seat from side to side and from front to back. The belt should not move.

NOTE: If the lap belt moves, a locking clip is required (see section L, page 14, Locking Clip Use).

L. LOCKING CLIP USE (FORWARD-FACING)

Some vehicles have continuous loop lap-shoulder belts which allow the belt to move freely through the sliding tongue. After it is buckled, the lap portion will loosen. By using a locking clip, the lap portion will not loosen.

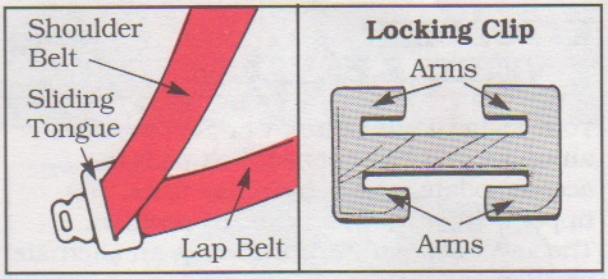

1. Tighten the belt as much as possible.

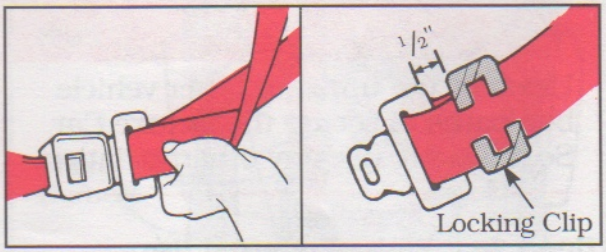

2. With the belt tight, hold the lap and shoulder belts together just behind the sliding tongue, and unbuckle the belt.
3. While continuing to hold the belts together, place the locking clip on the belts approximately 1/2" from the sliding tongue. Tuck the edges of the belts under the arms of the locking clip on both sides.
4. Buckle the belt. Tug on the lap belt to be sure it does not move.
5. Test for a secure installation by forcibly pushing the Car Seat from side to side and pushing the back of the Car Seat and moving it front to back.

NOTE: If the lap belt continues to move, choose another seating position. If there is not a position which will keep the Car Seat secured with a lap belt, contact your vehicle dealer to have a lap belt installed in your vehicle.

⚠ WARNING

Alteration of your vehicle seat belt system could lead to belt failure and a serious or fatal injury. Do not alter the vehicle seat belt system yourself. Contact your vehicle dealer.

M. SECURING YOUR TODDLER

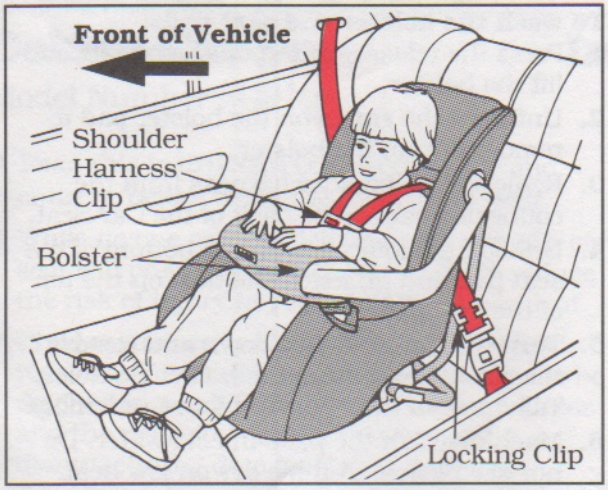

1. Remove the shoulder harness clip from one of the shoulder harness belts.
   - Press the tab on the shoulder harness clip.
   - Slide the shoulder harness belt off of the shoulder harness clip.

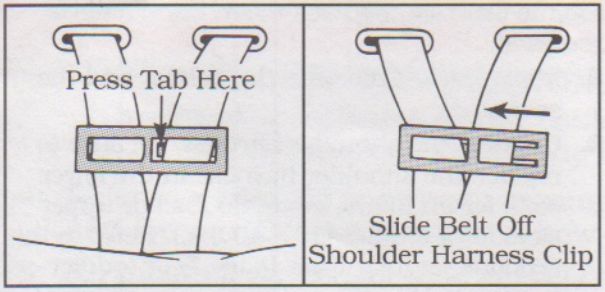

2. Press the release button on the buckle.
3. Lift the bolster up.

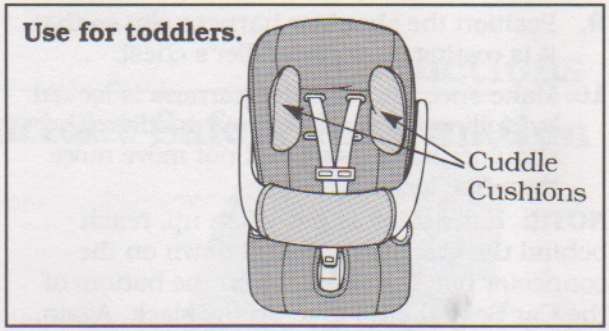

4. Place the cuddle cushions in the Deluxe Car Seat, as shown.
5. Place toddler in the Car Seat.
6. While holding the buckle on the bolster, carefully lower the bolster and the shoulder harness onto toddler's shoulders.

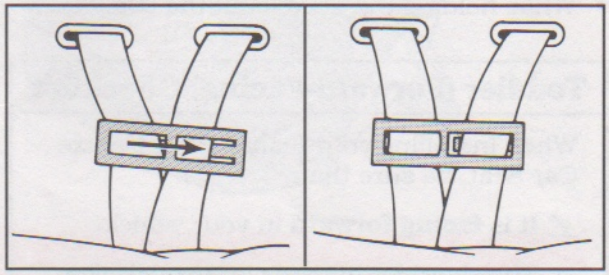

7. Insert the buckle onto the buckle tongue. **Make sure you hear a click!**

NOTE: Pull up firmly on the buckle to be sure it is locked. If it is not locked, check the area around the buckle tongue to be sure it is free of debris. If necessary, pull forward on the buckle tongue and check the area behind it.

⚠ WARNING

The bolster alone is not sufficient to restrain your child in an accident. The buckle must be securely attached to the buckle tongue.

8. Fasten shoulder harness clip on the shoulder harness belt. To do so:
   - Press the tab down on the shoulder harness clip.
   - Slide the shoulder harness completely onto the shoulder harness clip.

9. Position the shoulder harness clip so that it is resting on your toddler's chest.
10. Make sure the shoulder harness is locked by pulling it away from your toddler. The shoulder harness should not move more than one inch.

NOTE: If the slack is not taken up, reach behind the Car Seat and pull down on the connector bar The retractor on the bottom of the Car Seat should take up the slack. Again, pull the shoulder harness away from your toddler to be sure it is locked.

To remove your toddler:

- Remove the shoulder harness clip from one of the shoulder harness straps.
- Press the release button on the buckle.
- While holding the buckle, lift the bolster.

Toddler (Forward-Facing) Checklist

When installing your Fisher-Price Deluxe Car Seat, be sure that:

- ✓ It is **facing forward** in your vehicle.
- ✓ The shoulder harness is **through the upper slots.**
- ✓ It is in the **semi-reclined or fully upright position.**
- ✓ The vehicle lap belt (or lap-shoulder belt) is routed through the Car Seat frame using either the upper or diagonal belt path.
- ✓ It has been **tested** for a secure installation.
- ✓ The shoulder harness clip is **resting on toddler's chest.**
- ✓ The buckle is **locked.**

N. DELUXE CAR SEAT CARE

To wash the bolster and seat pads:

1. Press the release button on the buckle and lift the bolster.
2. Unfasten the snaps on the bolster pad to remove it from the bolster.
3. Remove the shoulder harness from the connector bar on the back of the Car Seat.
4. Unhook the four clips on the bottom of the seat pad and unfasten the tabs on the top of the seat pad.
5. Turn the Car Seat face down and remove the elastic loops from the half circle holes. Take note of their position for re-assembly.
6. Machine wash the pads in cold water. Do not use bleach. Tumble dry on low heat.
7. Clean the bolster and seat shell with a mild cleaning solution and damp cloth. Rinse with clean water to remove soap residue.

NOTE: Frequently check the entire area around the buckle tongue. Keep it clean and clear of anything that will prevent the buckle tongue from sliding back when the buckle is removed.

8. Replace the pads onto the bolster and the seat shell.
9. Connect the shoulder harness. Be sure to replace the shoulder harness in the lower slots for an infant (up to 20 lbs.) or upper slots for a toddler (20 – 40 lbs.). Refer to the sections on infant use (page 7) or toddler use (page 12).

The Fisher-Price Deluxe Car Seat meets all Federal Motor Vehicle Safety Standards for use in motor vehicles and aircraft.

©1993 Fisher-Price, Inc.
Printed in U.S.A.
East Aurora, New York 14052
AO9104 2 814482